




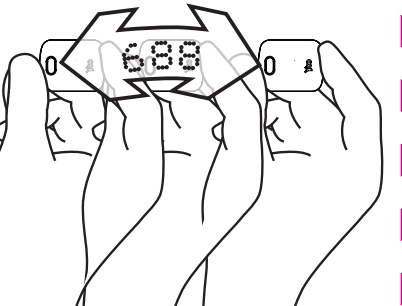
How to Activate Air Show

YOO doesn't have a traditional display but there is a cool way to view your progress and it's called Air Show. Here's what you do:

1. Press the front, center button once to activate the LED lights.
2. Hold YOO with the YOO logo facing you and perpendicular to the ground.
3. Wave the devices from left to right and you will see your current step count appear in the air.
4. Waving YOO to reveal your progress will NOT create false step counts.



**Important:** If you don't see your step count the first time you wave your YOO2 just try again. Sometimes it takes a few tries.

 


If left-handed, hold YOO with forefinger next to button instead of thumb.

Where to Wear YOO®

You can attach YOO2 to anything you're currently wearing. Some examples are your waistband, a cuff or sleeve, your hat, shoe, pocket or collar. You can also comfortably slide YOO2 into a pocket, bra or sock.

Clip and Storage Options::

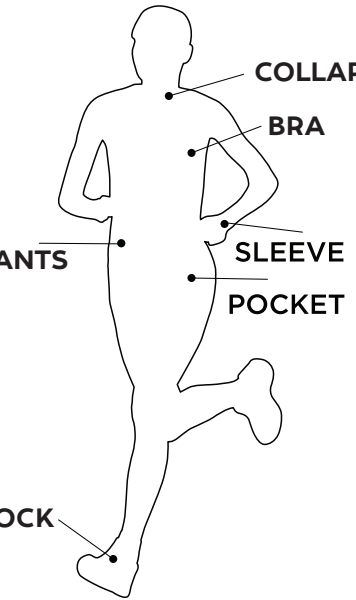

What Do I Need to Know About the Battery?

YOO2 uses a CR2032 3V Lithium battery. Hopefully you won't have to become a battery expert because this little guy should last over six months. If you do need a new battery you can buy one at most super markets and pharmacies.

 
Low Battery Alert

If your battery power is low, the center LED light will flash every 15 seconds to indicate that it is time to change your battery. By the time that happens you will have forgotten this little tid bit of information so we'll make it easy for you to find battery info on our website.



Battery Replacement

1. Go to a local supermarket or pharmacy and buy a CR2032 3V Lithium Battery.
2. You will need a precision Philips head screwdriver that fits 1.2mm screws.
3. Loosen the screws on the back of the device with the screwdriver to remove the cover.
4. Carefully remove the battery and dispose of it properly and safely.
5. Insert a new CR2032 battery with the positive side (+) up.
6. Place the cover back on and tighten the screws with a screwdriver.

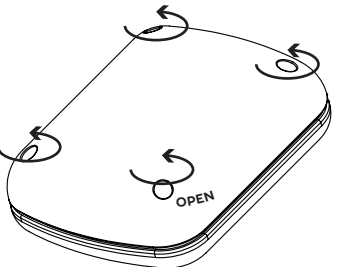

Clearing the Current Step Count

Press and hold the front button for 5 seconds until all 5 LED light turn on.

Each LED will turn off one by one. Once all LEDs have turned off, the current step count will be cleared.

YOO® Memory

YOO2 can store up to 14 days of activity. The Full Memory Alert will start when the YOO2 is not synced over 10 days or more.

However, it doesn't really want to because you're supposed to be syncing to the YOO App daily and getting bonus points for doing so!

Full Memory Alert! Don't Freak Out!

If the memory is full you'll notice that once per minute, all 5 LEDs will flash. Think of it as your YOO2 saying "Help! I'm stuffed!"

Clearing the Memory

To clear the YOO2 memory, sync to the YOO app. YOO2 will thank you.

Care and Maintenance

Here are some smart things you can do to care for YOO.

Clean YOO with a soft dry cloth. Do not use any abrasive cleansers. Do not immerse YOO in water. Store YOO in a safe and dry place. Do not subject YOO to shock, extreme heat or long-term exposure to direct sunlight. Remove the YOO battery if the device will not be used for longer than three months. Yoo Trackit Jacket® contains a strong magnet so be careful using around electrical equipment and medical devices.

YOO®2 Support

If you have any questions or need help with

your new YOO2 device, please call us Monday - Friday from 9am to 5pm EST at 1-866-241-0276 or email us at Help@YOOChallenge.com. We'll do our very best to help!

1-866-241-0276

Warranty

For purchases made in the U.S and Canada. If at any time within one (1) year from the purchase date of this product, it fails to perform properly due to defects in material, workmanship or manufacturing, please return it prepaid with your Proof of Purchase to:

YOO Fitness, LLC,  
Returns Department  
15 Timber Lane, Marlboro, NJ 07746.

Replacement

Your YOO2 has been carefully designed, manufactured and packaged. If any parts are missing or damaged please return it to the above address and we will replace it free of charge. Please do not return your YOO2 to the store where you purchased it.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device meets the FCC and IC requirements for RF exposure in public or uncontrolled environments.

Environmental Conditions

- YOO is water-resistant but not water-proof. It should not be used while swimming or submerged.
- Operating temperature: 32° to 104° F (0° to 40° C)
- Non-operating temperature: -0° to 130° F (-17.7° to 54.4° C)

Battery Safety Information

- Non-rechargeable batteries are not to be recharged
- Do not mix alkaline, standard

- (carbon-zinc), or rechargeable (nickel-cadmium) batteries
- Exhausted batteries are to be removed
- Do not dispose of batteries in fire; batteries may explode or leak
- Do not dispose of product in fire; batteries may explode or leak
- The supply terminals are not to be short-circuited
- Batteries are to be inserted with correct polarity
- Clean the battery contacts and also those of the product prior to battery installation
- As always, dispose of batteries in an eco-friendly manner

Warnings and Cautions

It is recommended that you consult with a doctor before starting any fitness program. Additionally please be advised of the following:

- Follow all instructions and use only as intended.
- Do not tamper with your YOO.
- YOO is not a toy or a medical device.
- Do not use abrasive cleaners to clean your YOO.
- Do not place your YOO in a Dishwasher, Washing Machine or Dryer.
- Do not expose your YOO to extremely high or low temperatures.
- Do not leave your YOO in direct sunlight for an extended period of time.
- Do not leave your YOO near open flames.
- Do not attempt to your YOO, it does not contain serviceable components.



The symbol on the product or its packaging signifies that this product has to be disposed separately from ordinary household wastes at its end of life. Please kindly be aware that this is your responsibility to dispose electronic equipment at recycling centers so as to help conserve natural resources. For information about your recycling drop off

point, please contact your local electrical and electronic equipment waste management authority.

Child Safety

YOO and its accessories contain small parts

